

1. PERFORMANCE


- 1) Measuring range : 1.0-4.0 % 0.01-1.8 %
 Number of pump strokes : 1/2 (50ml) 1 (100ml)
- 2) Sampling time : 1.5 minutes/1 pump stroke
- 3) Detectable limit : 0.005 % (50 ppm)
- 4) Shelf life : 3 years
- 5) Operating temperature : 0 ~ 40 °C
- 6) Temperature compensation : Necessary (See "TEMPERATURE CORRECTION TABLE")
- 7) Reading : Direct reading from the scale calibrated by 1 pump stroke
- 8) Colour change : Orange → Dark brown

2. RELATIVE STANDARD DEVIATION

RSD-low : 10 % RSD-mid. : 5 % RSD-high : 5 %

3. CHEMICAL REACTION

Chromium oxide is reduced.



4. CALIBRATION OF THE TUBE

GAS CHROMATOGRAPHY



5. INTERFERENCE AND CROSS SENSITIVITY

Substance	Interference	ppm	Coexistence
Alcohols FIG.1	Similar stain is produced.		Higher readings are given.
Esters FIG.2	∕		∕
Ketones	∕		∕
Aromatic hydrocarbons	∕		∕
Halogenated hydrocarbons	Whole reagent is discoloured to Pale brown.	0.5 %	∕

Ethanol is indicated with half the sensitivity, Ethyl acetate has the same sensitivity with Ethylene oxide.

(NOTE)

- 1) If the discolouration exceeds the scale, replace the tube with new one and pull the handle at half stroke (to 50ml line). And read the concentration.
- 2) Correct the reading value with the temperature correction table first, and convert the value into an actual concentration by using the conversion scale shown in the instruction sheet.

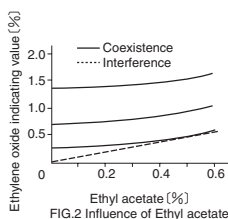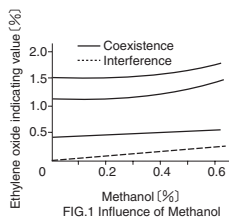

TEMPERATURE CORRECTION TABLE

Tube Readings (%)	Corrected Concentration (%)			
	0 °C (32 °F)	10 °C (50 °F)	20 °C (68 °F)	30 °C (86 °F)
1.8	—	2.00	1.80	1.70
1.6	2.06	1.78	1.60	1.50
1.4	1.84	1.58	1.40	1.35
1.2	1.60	1.34	1.20	1.14
1.0	1.31	1.12	1.00	0.93
0.8	1.08	0.91	0.80	0.73
0.6	0.86	0.70	0.60	0.54
0.4	0.63	0.49	0.40	0.34
0.2	0.36	0.26	0.20	0.16
0.1	0.20	0.14	0.10	0.08
0.01	0.05	0.02	0.01	0.01

